



FMINDK35 Fitting Instructions




Please thoroughly read through and familiarise yourself with these instructions in their entirety prior to beginning any part of the installation process of any component. Please also ensure the vehicle and engine has cooled down sufficiently to avoid risking possible skin burns or other injury.


TOOLS NEEDED:

Hose Clamp removal tool/Long nose pliers
T30 ratchet with suitable extension
Flat blade screwdriver
7mm ratchet with suitable extension


1. Open the bonnet and locate the air box and intake pipe. Release the spring clip attaching the intake pipe to the turbo elbow. Use a hose clamp removal tool or long nose pliers to do this.

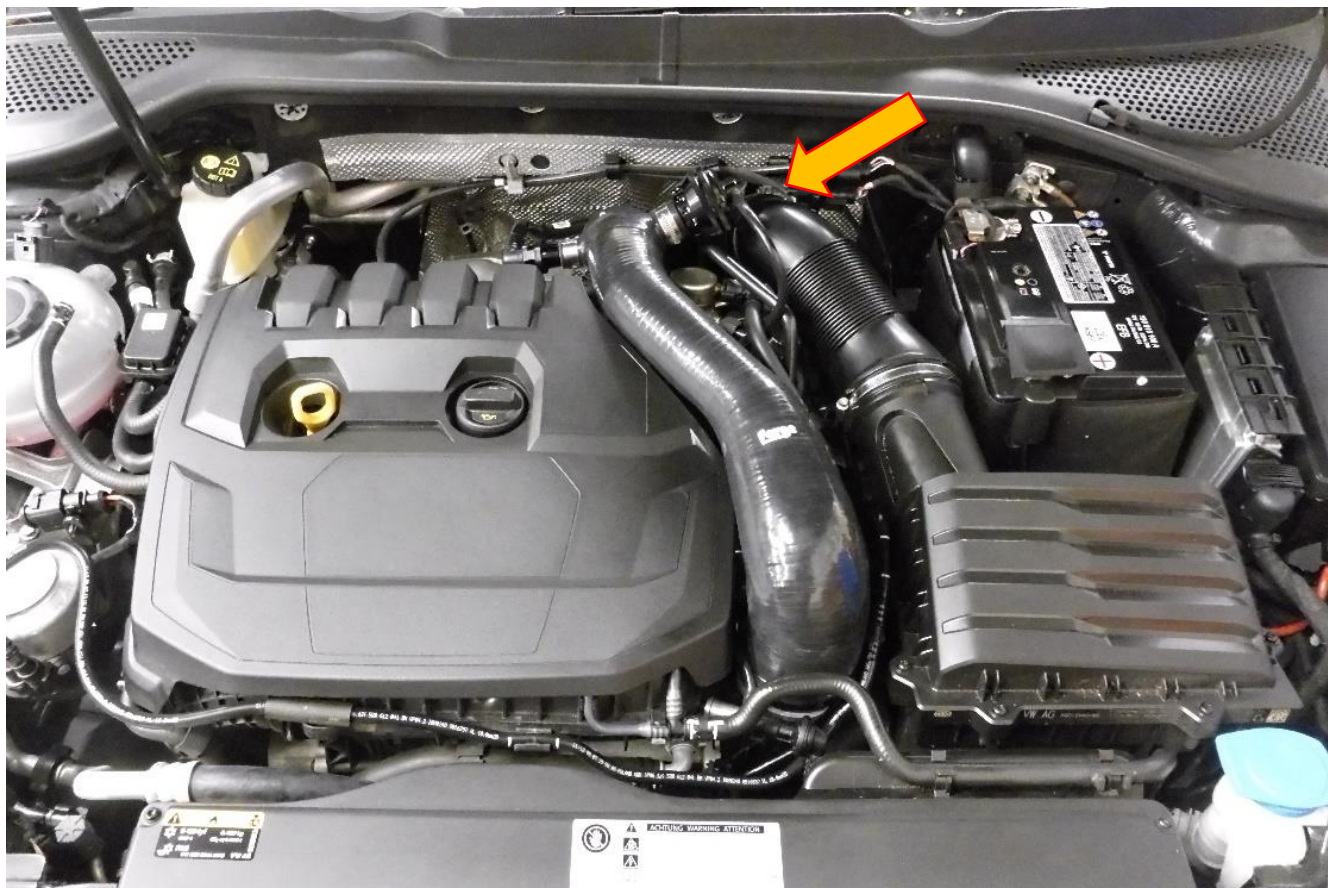


2. Pull the air box upwards sharply so it releases from its rubber mounting points and remove it and the attached intake pipe completely from the vehicle.

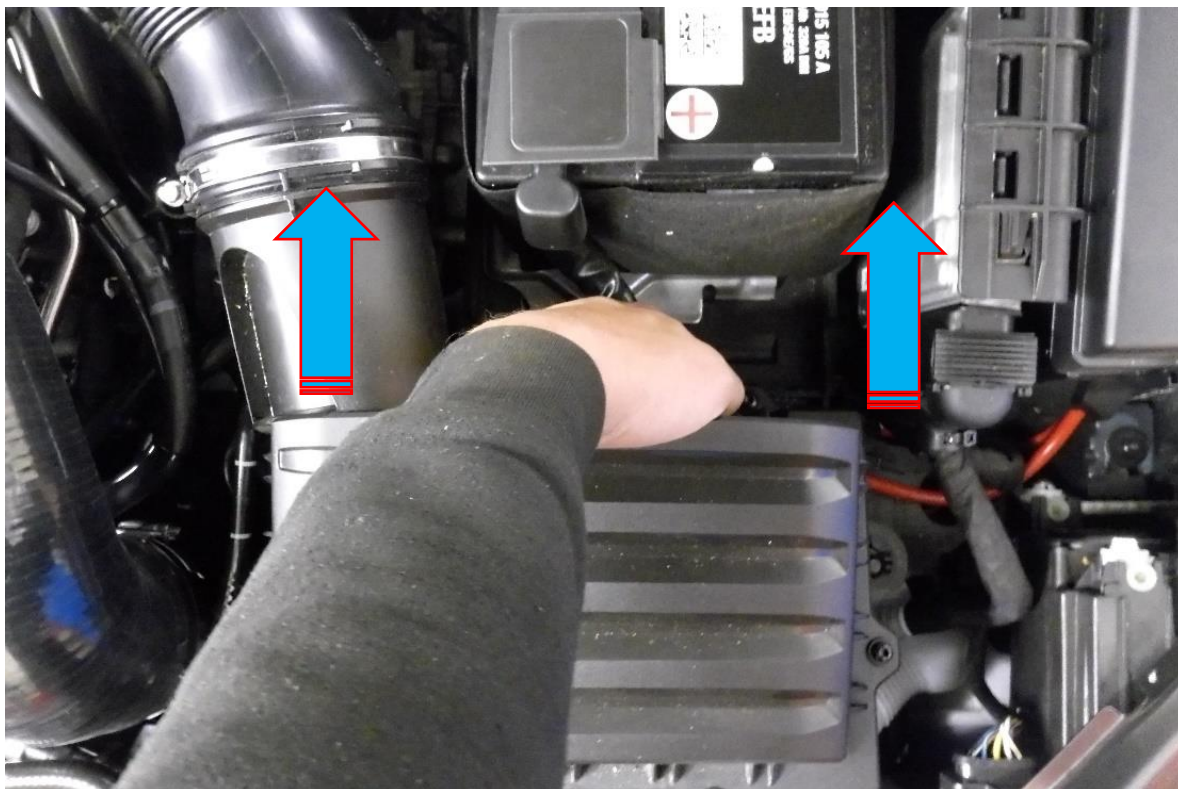


1. If your vehicle is equipped with this type of battery clamp follow these next four steps, if it's not go straight to step four. Using a 10mm socket and ratchet disconnect both battery terminals, start with the negative battery terminal and use the negative terminal cover to stop it touching the terminal when removing the positive side.

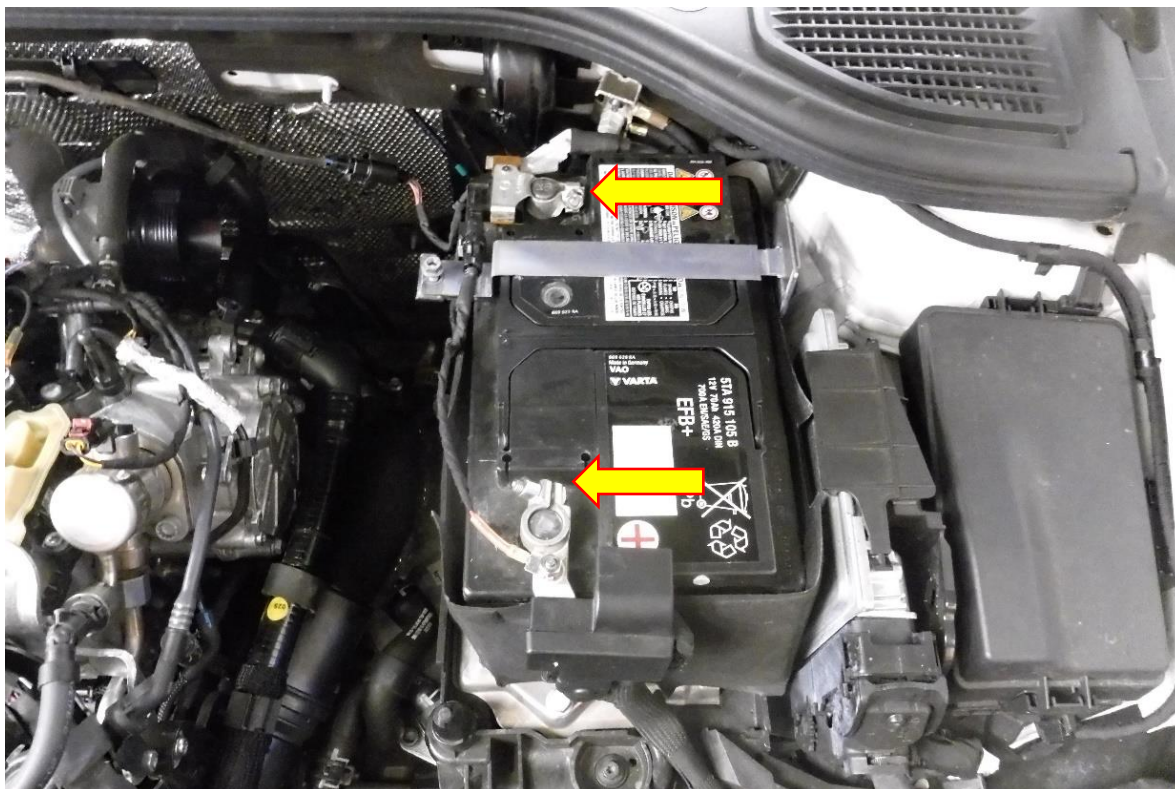

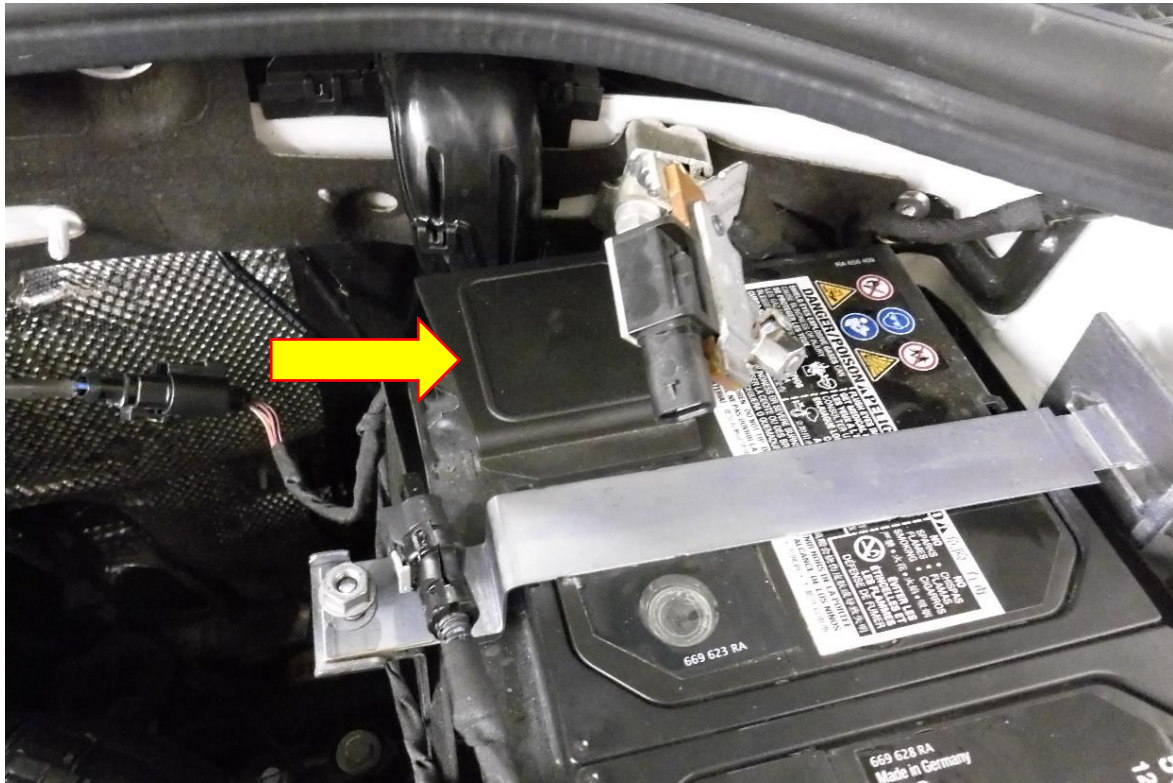


2. Using a 10 & 13mm socket and ratchet remove both fasteners attaching the clamps to the battery. You will now be able to remove the battery from the vehicle.

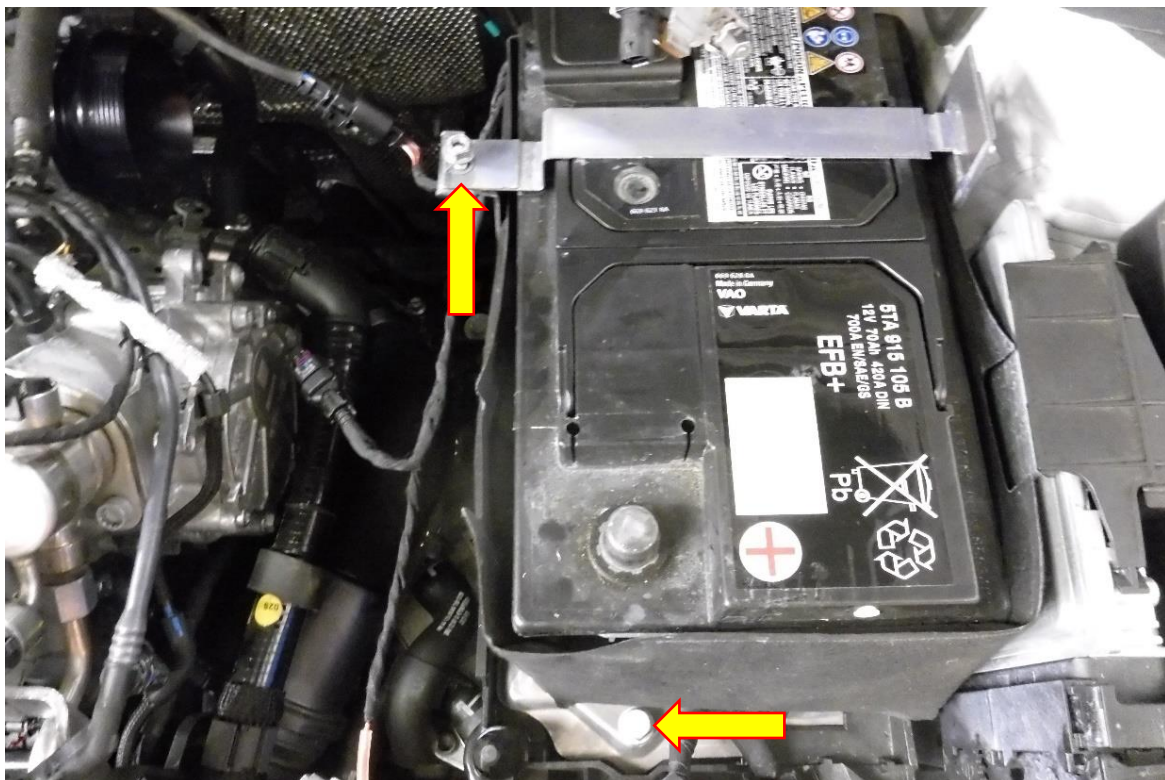


3. Using a 13mm socket and ratchet remove the fastener attaching the bracket to the battery tray. Remove the bracket and turn 180 degrees then re fit and fix it back into place. Now re install the battery.




4. Release the two Norma fittings attaching the breather hoses to the turbo elbow. If your vehicle is not equipped with this system ignore the rest of the breather system steps.

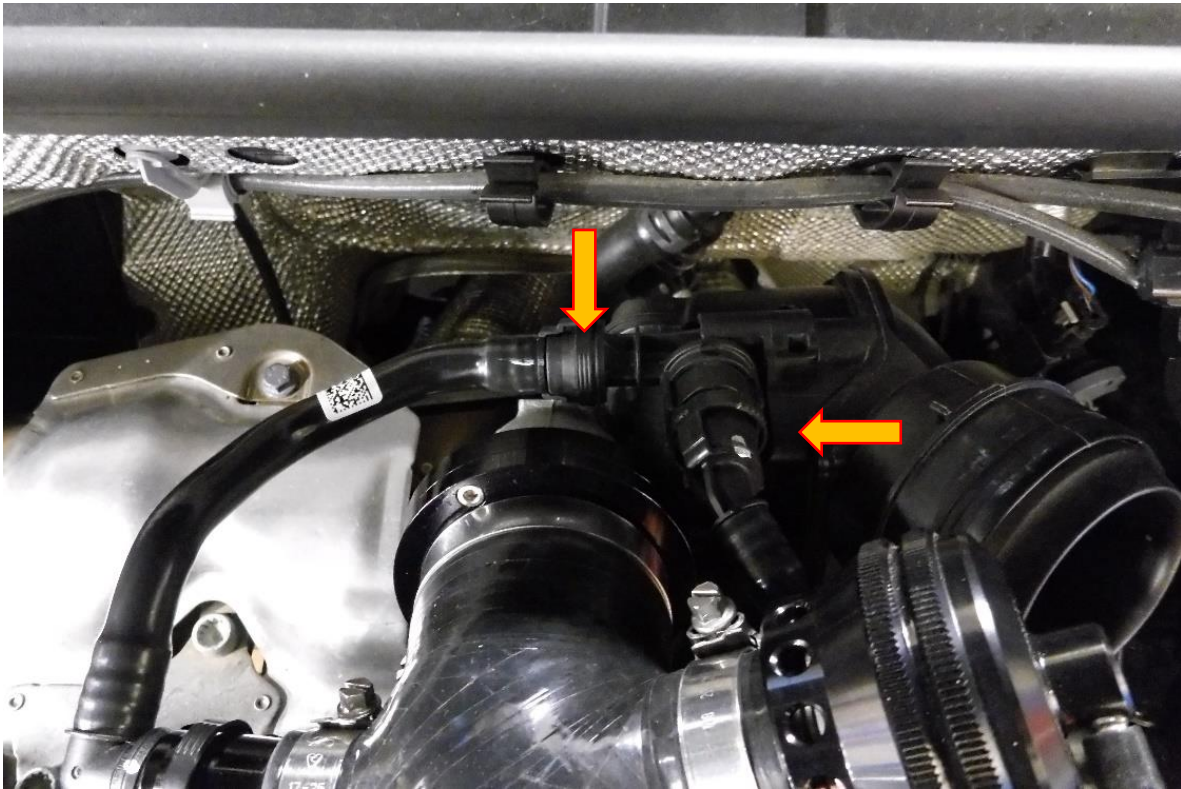


5. Using a T30 ratchet and suitable extension remove the two T30 fasteners attaching the OE turbo elbow to the turbo charger

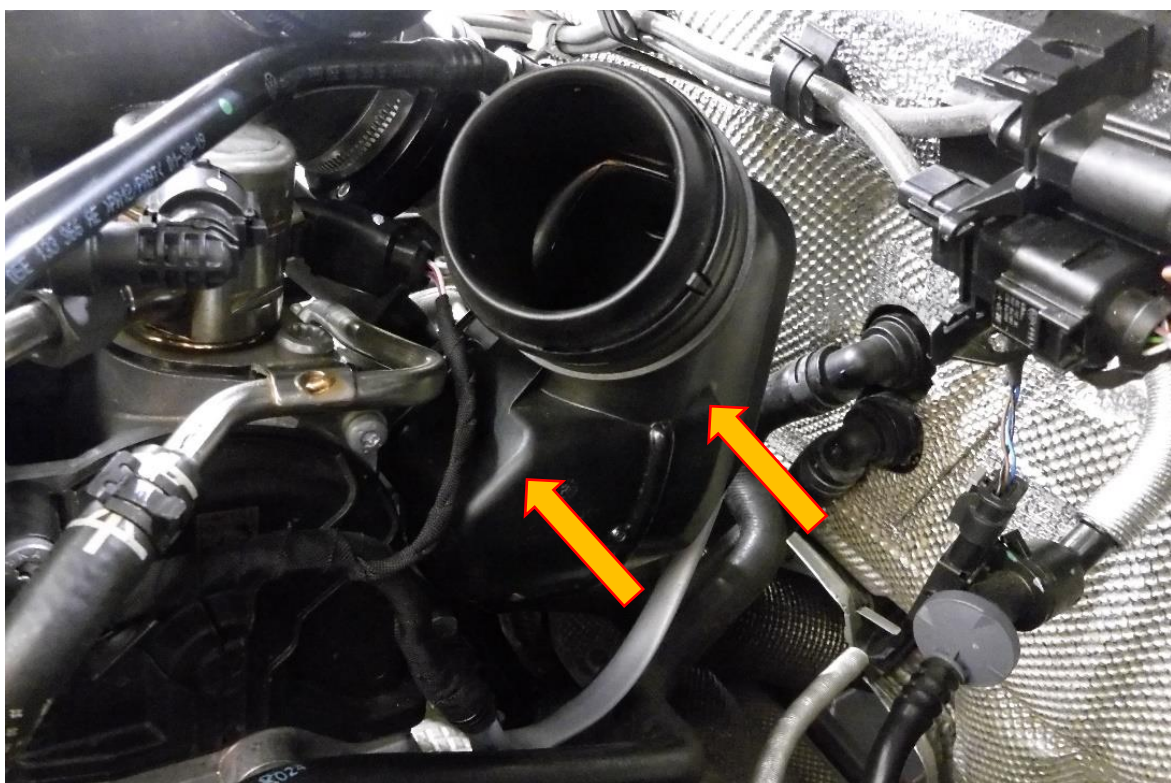

6. With the use of long nose pliers push in the two tabs while pulling the adaptor to free it. Remove the breather hose adaptor from the OE turbo elbow

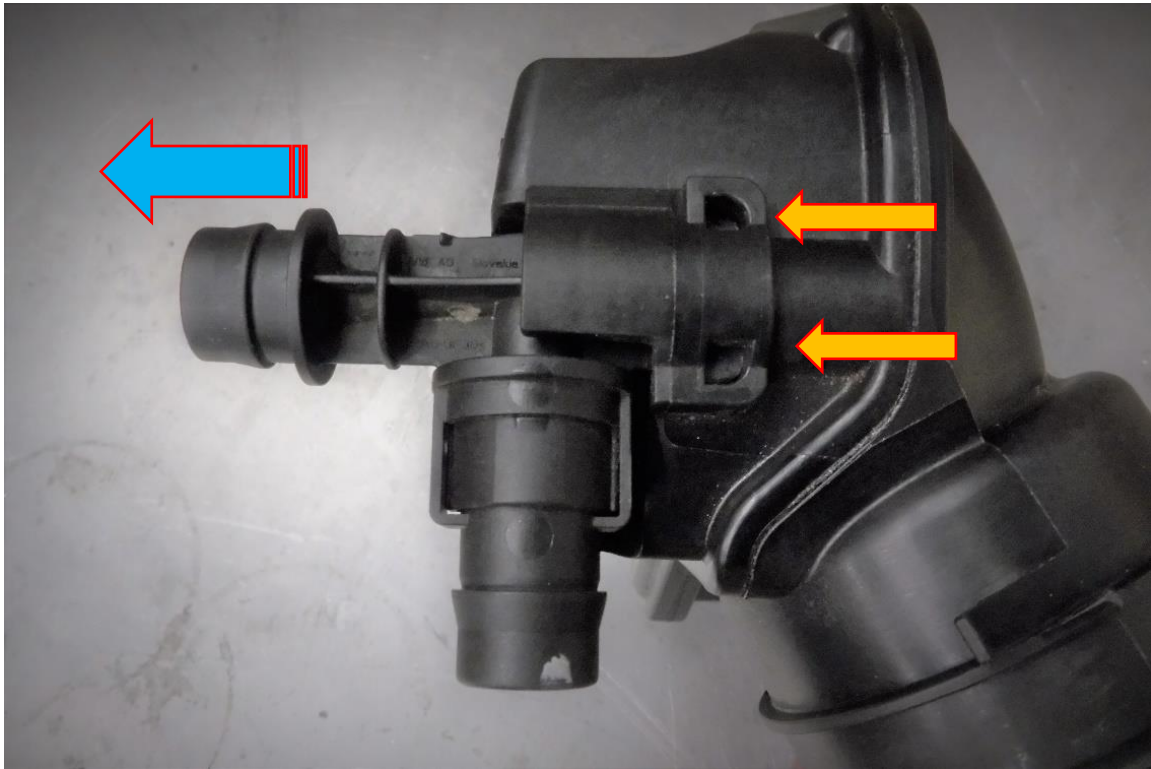



7. With the breather adaptor now removed, take the Forge Motorsport billet breather adaptor, and push it onto the end of breather adaptor with the green O ring. There is location marker on the billet adaptor which must be lined up with the plastic moulded line as shown in the picture below. Use the U clip supplied to secure the billet adaptor in place.

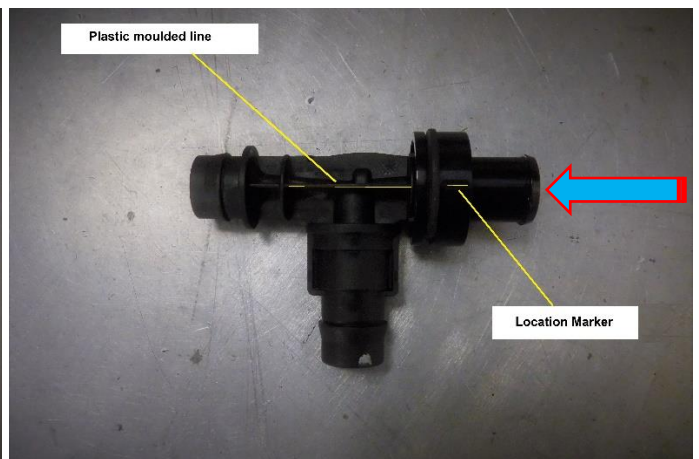




8. Using a 5mm Allen key and the supplied M6X16mm fasteners fit the billet turbo adaptor to the turbo as pictured below.

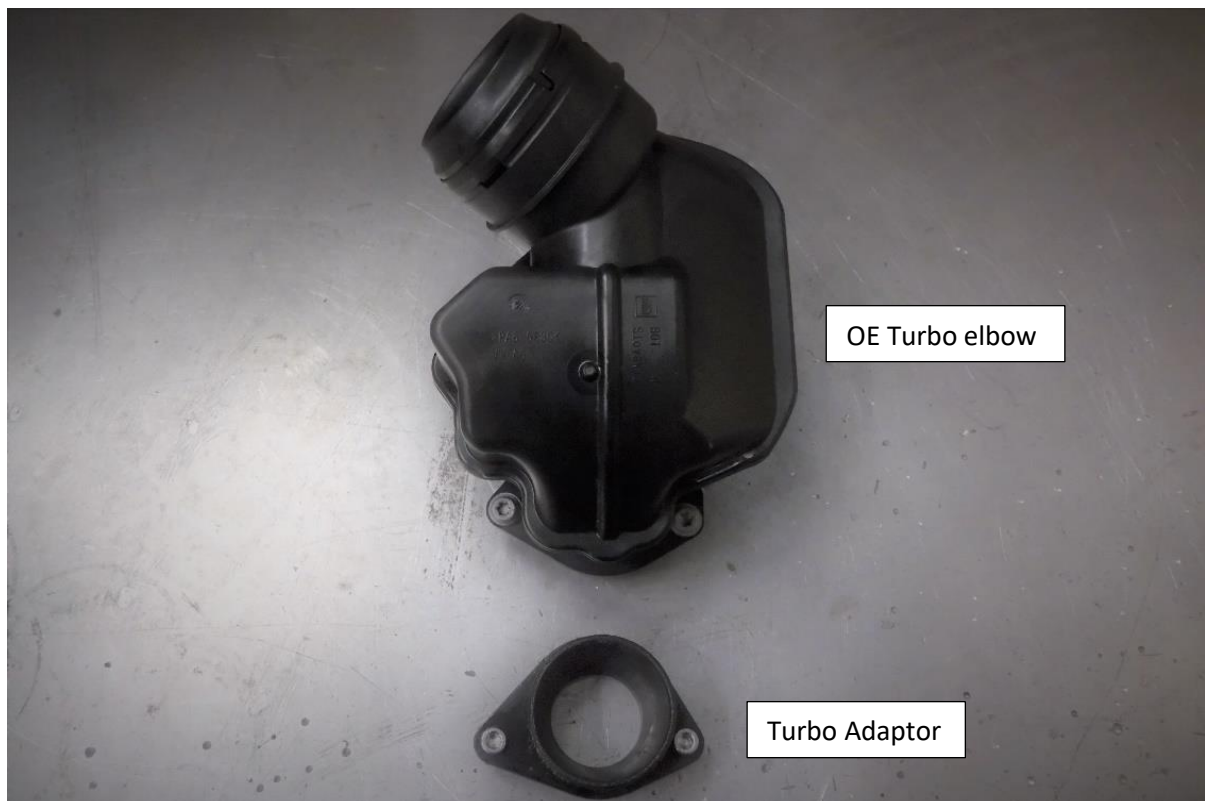


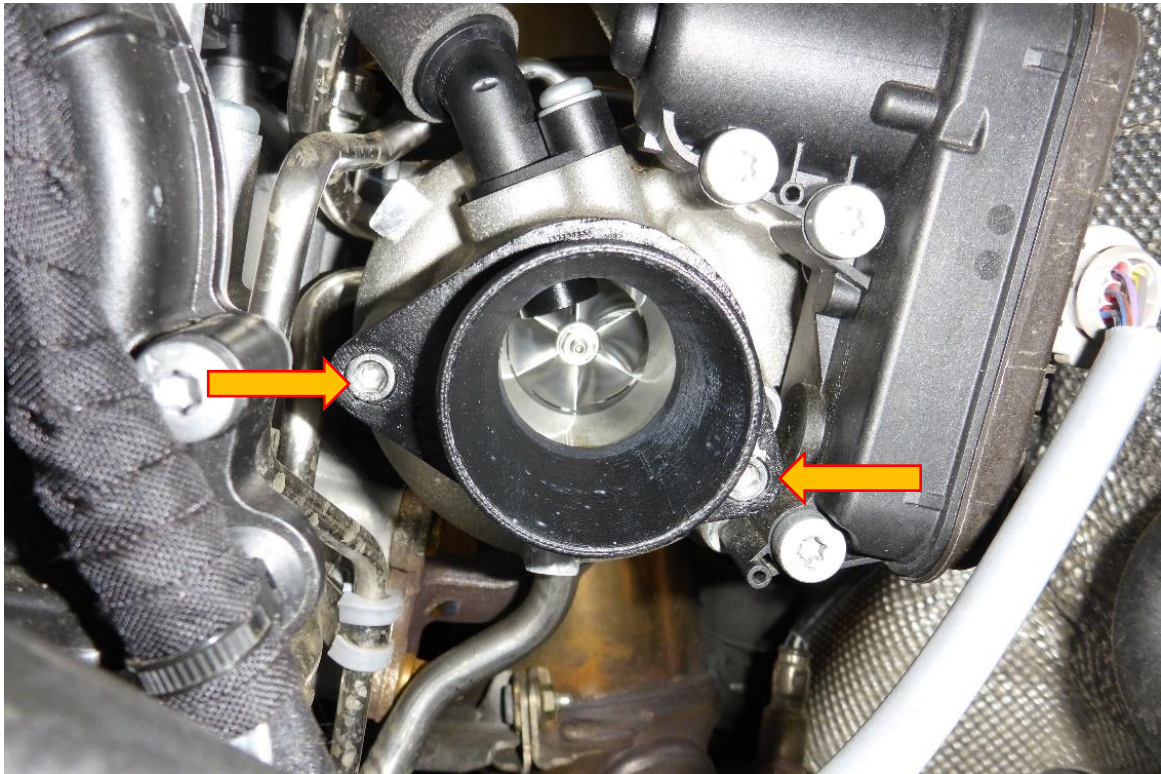


9. Fit the Forge silicone intake hose to the turbo adaptor, using a 7mm socket and ratchet or a flat bladed screwdriver fit the 50-70 hose clamp to secure it in place.

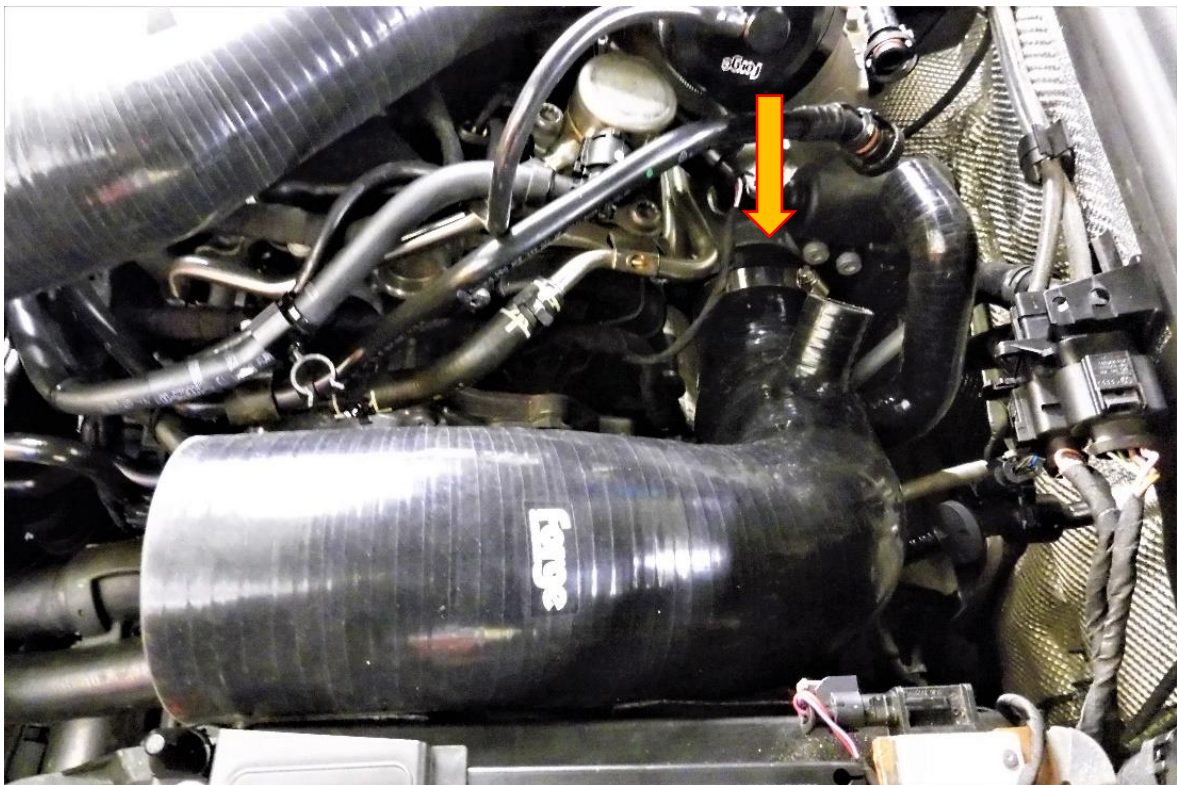



10. Take the breather adaptor and insert the billet end into the spout coming from the Forge intake hose. Secure it in place with the supplied 16-27 hose clamp, then re fit both breathers. If you are not installing our recirculation valve (FMDV30) install the supplied alloy blanking plug and secure it with the other 16-27 hose clamp.

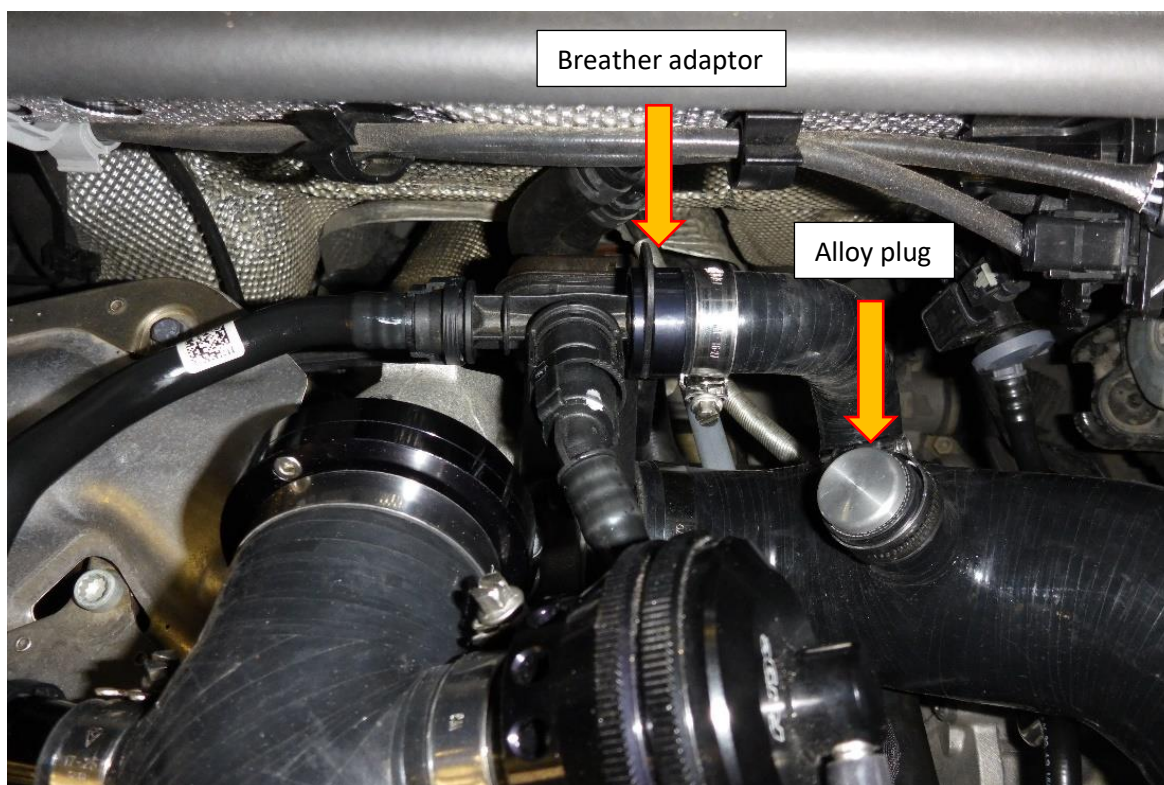



If your vehicle is not equipped with the extra breather hose, use the remaining alloy blanking plug to block off the spout and secure with the 16-27 hose clamp.

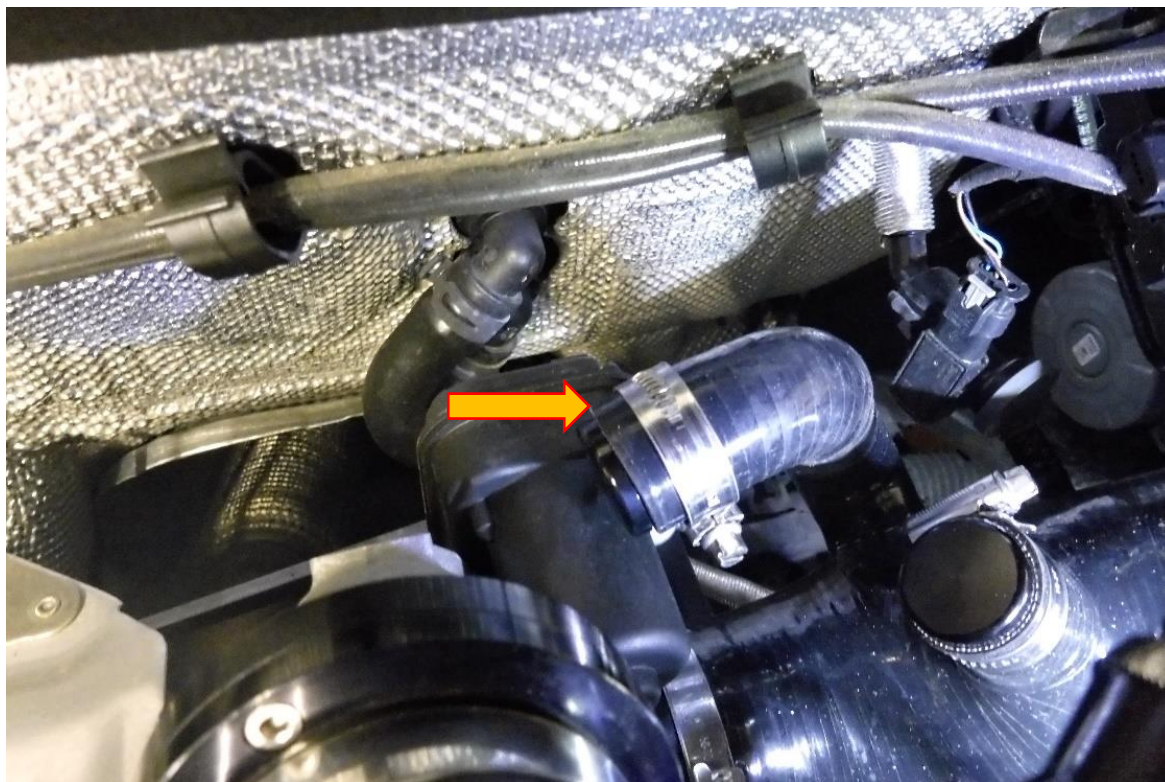

11. Install the alloy filter tray, by angling the cold air feed side first then line up the rubber mounting bushes with the locating pegs then push into position.

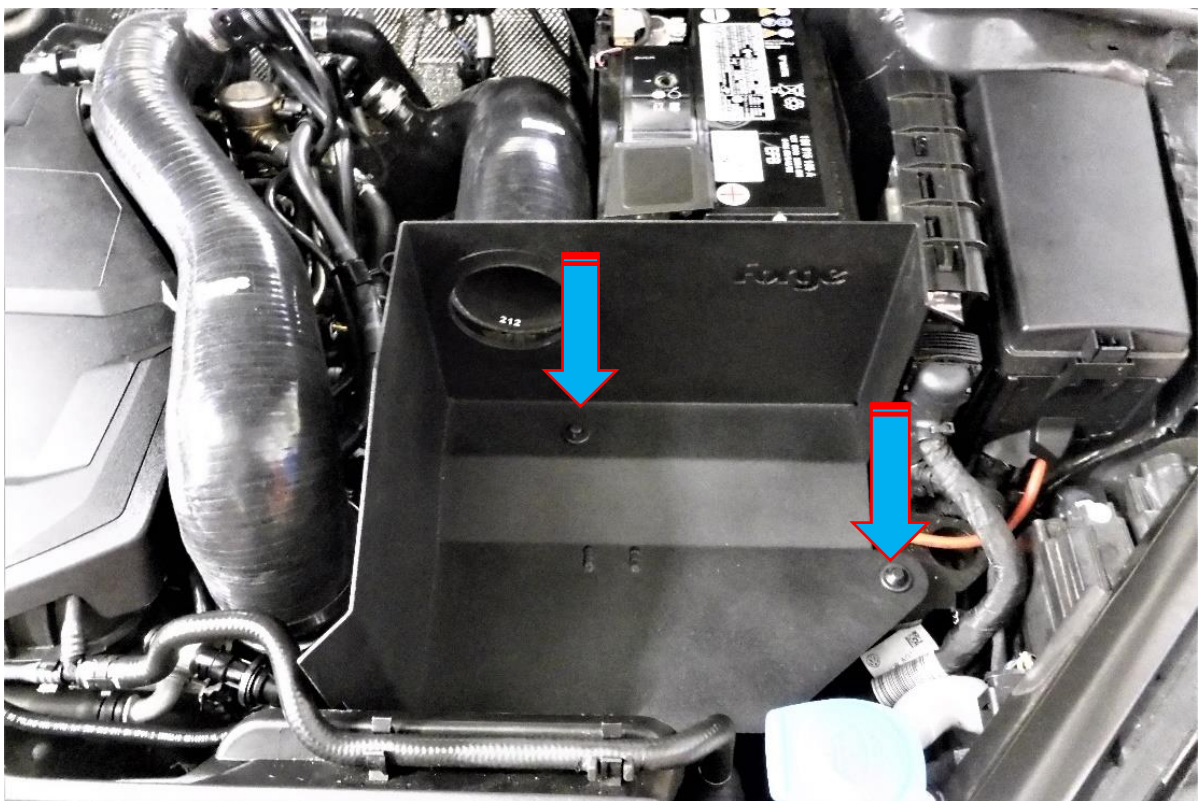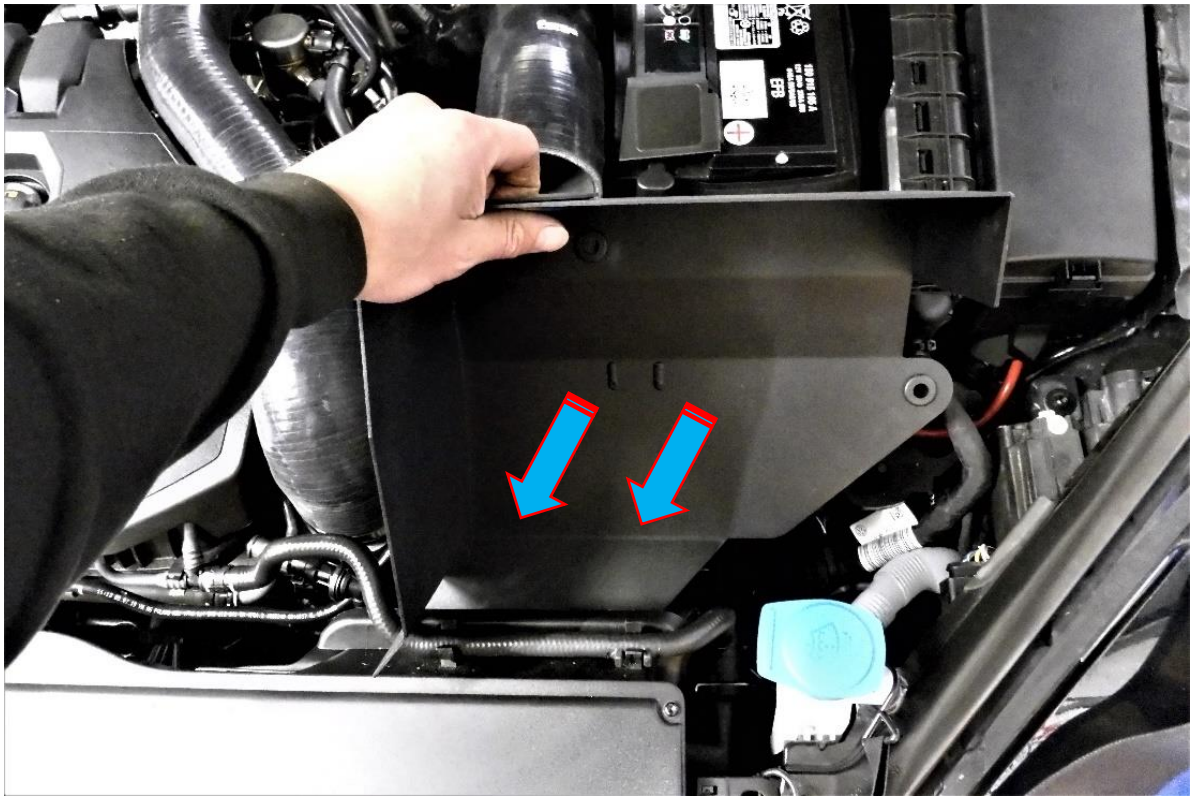

12. Loosely attach one of the 70-90mm hose clamps to the end of the silicone intake hose. Take the alloy intake pipe and insert the longer end into the silicone intake hose through the rubber O-ring. Do not tighten the hose clamp at this stage.

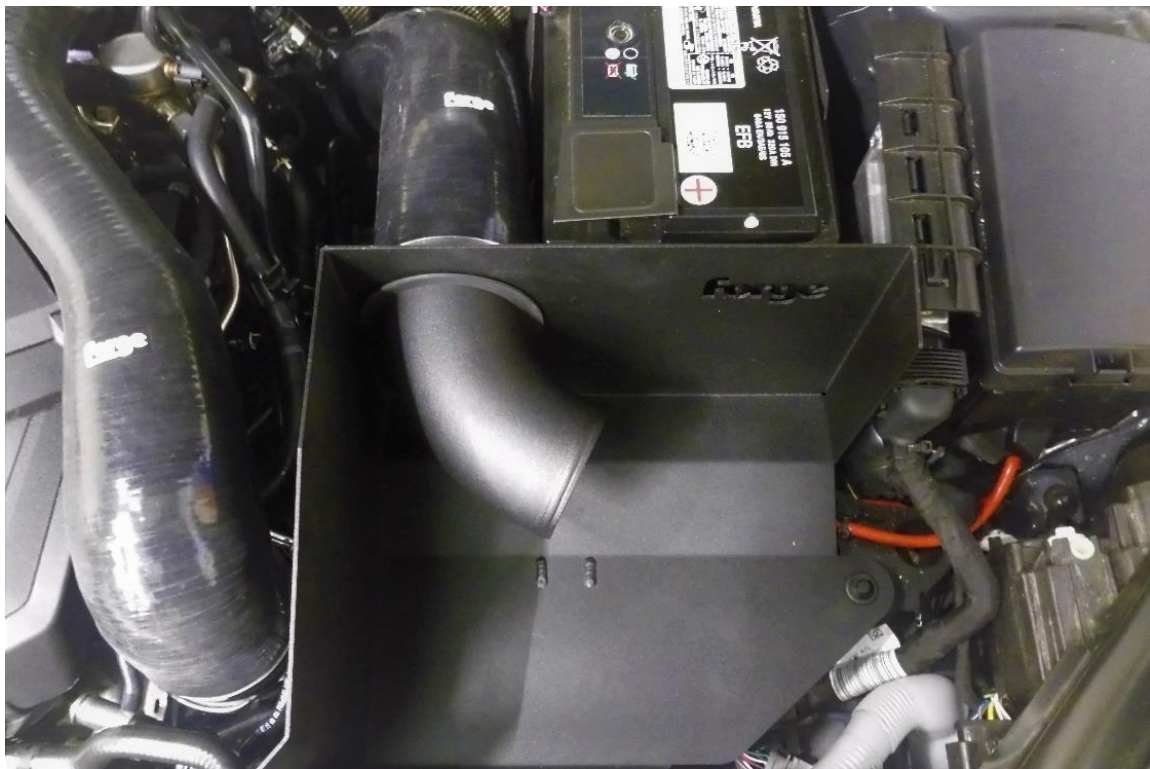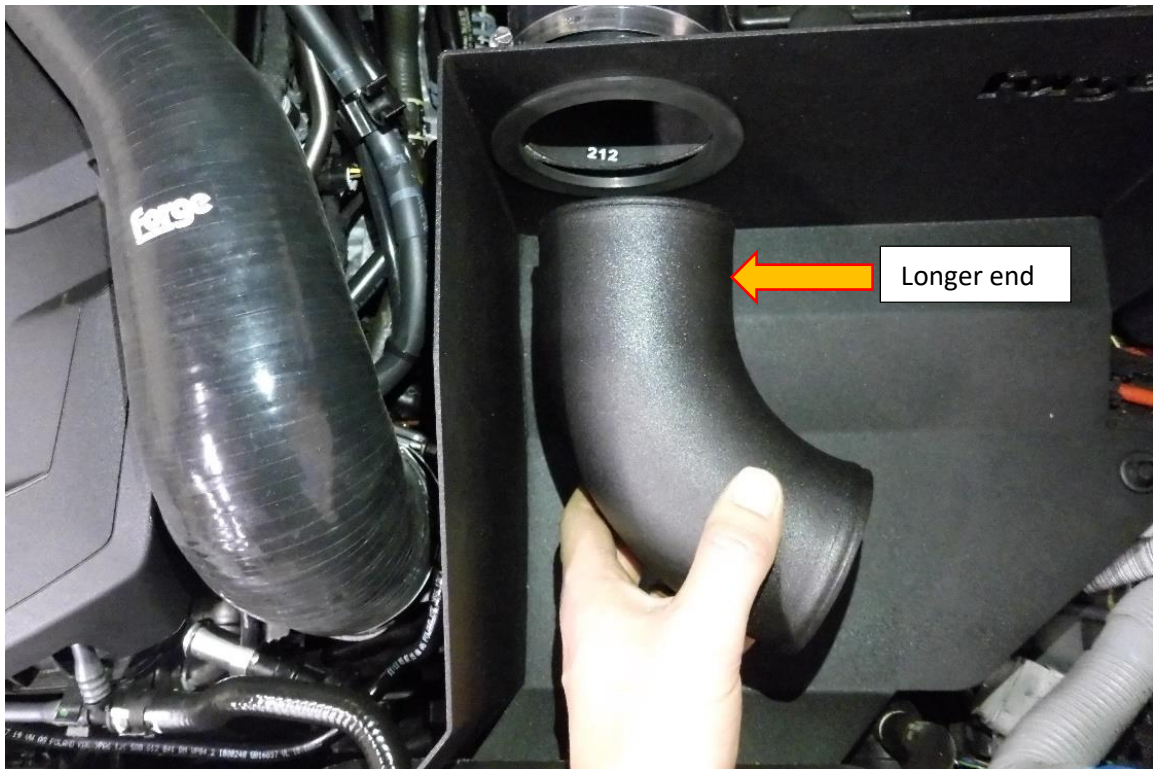

13. Fit the Forge filter onto the end of the alloy pipe and secure it into place with the remaining 70-90mm hose clamp. Angle the filter so that it has between 10mm-15mm clearance from the bottom the filter tray, then tighten the other hose clamp fitted in step 11. Use a 7mm socket and ratchet or flat blade screwdriver to tighten the hose clamps.



14. That is the installation of FMINDK35 complete, we always recommend a quick spanner check before a test drive. Now enjoy your new Forge Motorsport product.

Check out WWW.FORGEMOTORSPORT.CO.UK and WWW.FORGEMOTORSPORT.COM

For a full range of performance products for your vehicle.

If you have any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/Installer or you may contact us directly.

Forge Motorsport UK (+44)1452 380999

Forge Motorsport USA (407)-447-5363

Forge Motorsport ASIA +886-4-22516887

info@forgemotorsport.co.uk

sales@forgemotorsport.com

sales@forgemotorsport.asia



Forge Motorsport



@forgemotorsport



@forgemotorsport



Forge Motorsport